


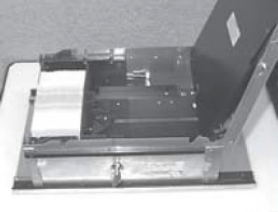




REPLENISH SDD CASSETTE



STEP	ACTION	STEP	ACTION
1	<p>UNLOCK/OPEN DISPENSER SECURITY DOOR. GRASP THE CASSETTE HANDLE AND REMOVE THE CASSETTE.</p> 	4	<p>COUNT THE NUMBER OF BILLS THAT REMAIN IN THE CASSETTE, IF ANY.</p> <p>COUNT THE NUMBER OF BILLS THAT ARE BEING ADDED TO THE REMAINING NOTES.</p> <p>THE TOTAL OF THESE AMOUNTS WILL BE ENTERED IN THE "ENTER CASSETTE QUANTITY" PROMPT FOR CASSETTE CLOSE PROCEDURE.</p>
2	<p>SLIDE CASSETTE ON TO THE LOADING TRAY. LIFT LID TO EXPOSE THE REJECT TRAY. REMOVE ANY REJECT NOTES. DO NOT RECYCLE REJECTED NOTES!</p>  	5	<p>PLACE CURRENCY IN THE CASSETTE AND SLOWLY RELEASE THE HOLD-BACK LATCH ALLOWING THE PACKER PLATE TO MOVE FORWARD AGAINST THE NOTES. CLOSE THE CASSETTE LID.</p> 
3	<p>LIFT THE REJECT TRAY. PUSH THE PACKER PLATE TO REAR OF CASSETTE AND LATCH IN PLACE.</p> 	6	<p>REMOVE CASSETTE FROM LOADING TRAY.</p> <p>INSTALL THE CASSETTE INTO THE DISPENSER.</p> <p>Do not "slam" or force the cassette into place.</p> 

For more information or assistance, please call **cashline** 1-888-870-9780